




1. LAY OUT THE PANEL LOCATION.

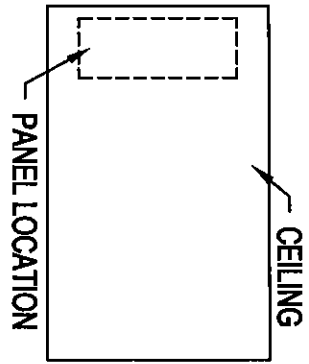


3. SECURE THE EC-2 BRACKET / EC-4 BAR TO THE CEILING WITH SCREWS.

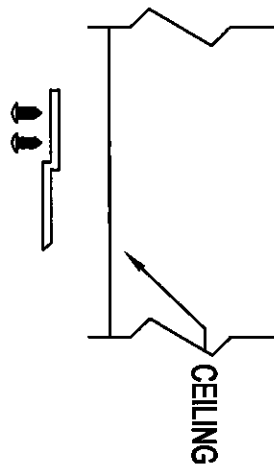

2. DETERMINE EC-2 BRACKET / EC-4 BAR LOCATIONS ON WALL TO LINE UP WITH EC-1 BRACKET LOCATIONS ON PANELS.

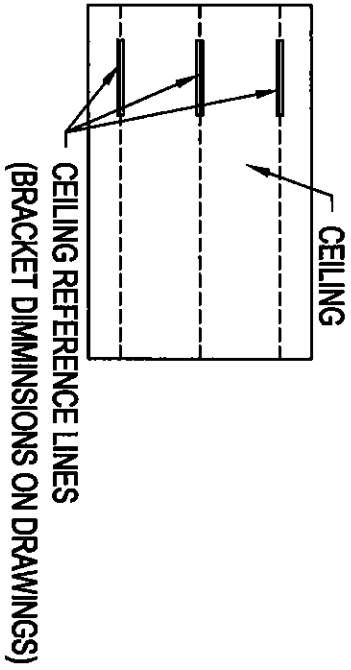

4. SLIDE THE EC-1 BRACKETS ON THE PANELS ONTO THE EC-2 / EC-4 BARS ON THE CEILING.

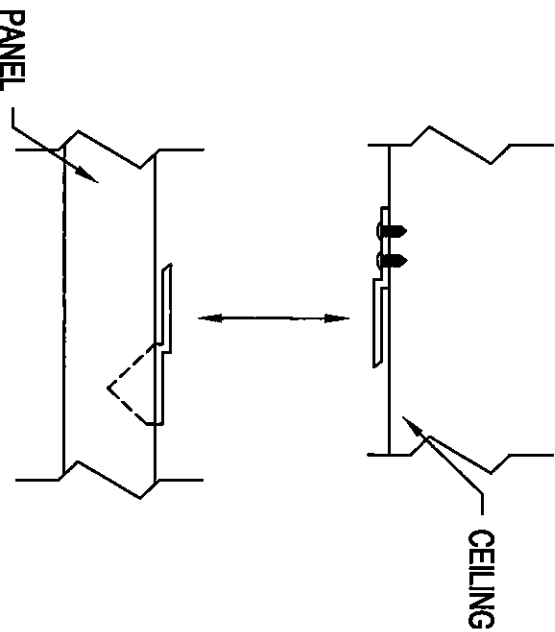

*APPLY A SMALL AMOUNT OF ADHESIVE ON BOTH PARTS OF THE BRACKETS. THEN SLIDE BRACKET TOGETHER

REV	DRAWN BY	DATE

EC-CLIP CEILING MOUNTING DETAIL

SOUND SEAL®
 50 H.P. ALMGREN DRIVE AGAWAM, MA 01001
 PH. (413) 789-1770 FAX: (413) 789-4444

SCALE: NTS
 JOB NUMBER: - SHEET: 01
 DRAWN BY: JP DATE: 04-22-08