




1. LAY OUT THE PANEL LOCATION ON THE WALL

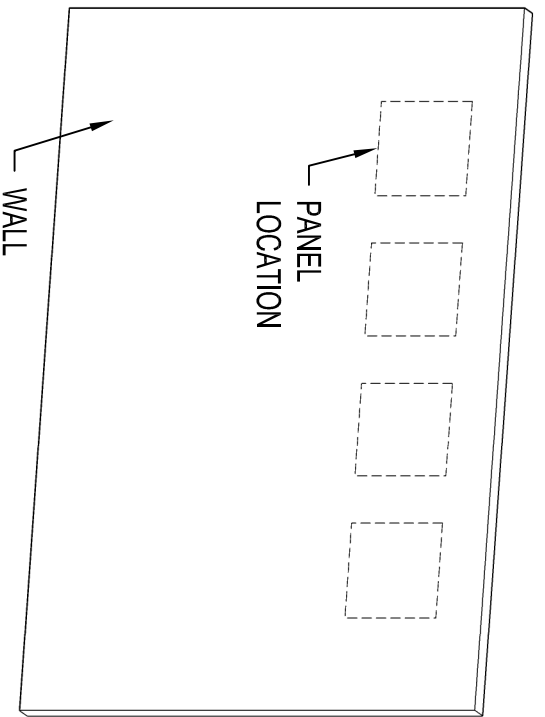


2. SECURE IMPALING CLIPS TO WALL USING APPROPRIATE FASTENERS. CLIPS SHOULD BE LOCATED TO ENSURE THERE IS NO CONTACT BETWEEN CLIPS & FABRIC.

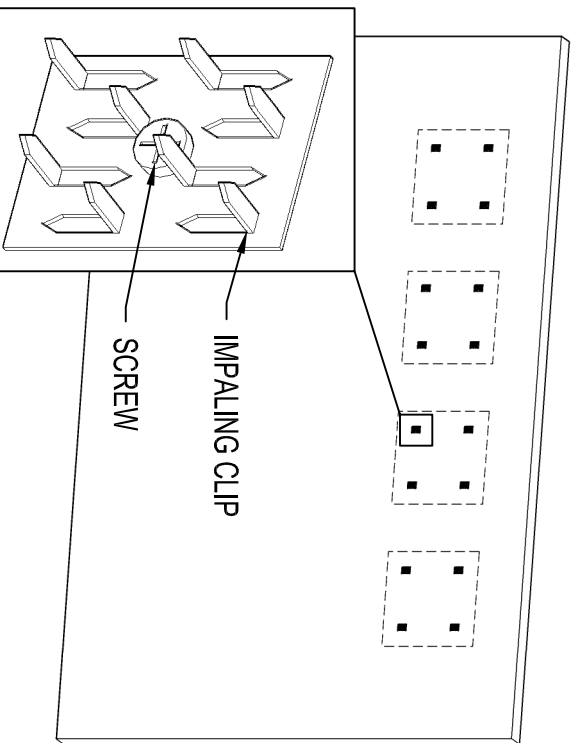

3. APPLY A GENEROUS AMOUNT OF LIQUID NAILS OR CONSTRUCTION ADHESIVE TO PANEL ALONG THE PERIMETER OF THE FABRIC.

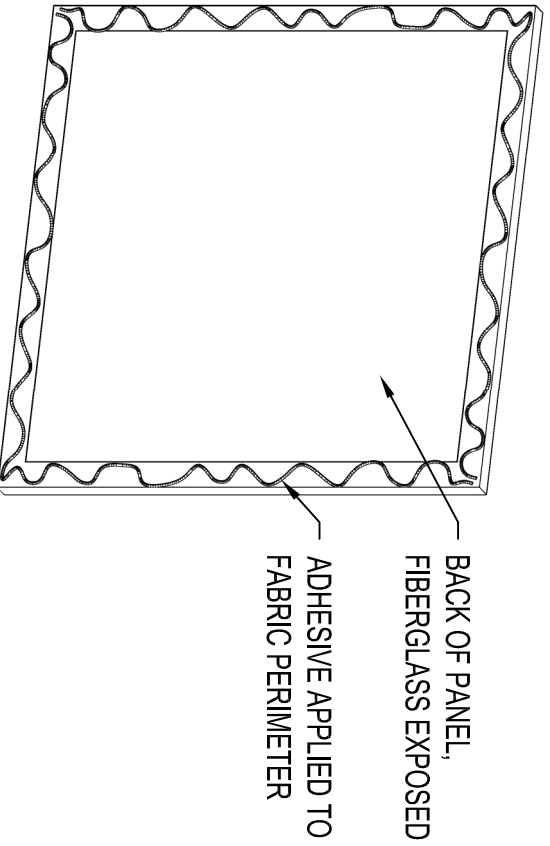

4. ENSURE PANEL IS LOCATED PROPERLY, PRESS PANEL FIRMLY TO WALL. (MAKE SURE THE FIBERGLASS CORE IS BEING IMPALED BY THE CLIPS, NOT THE FABRIC.)

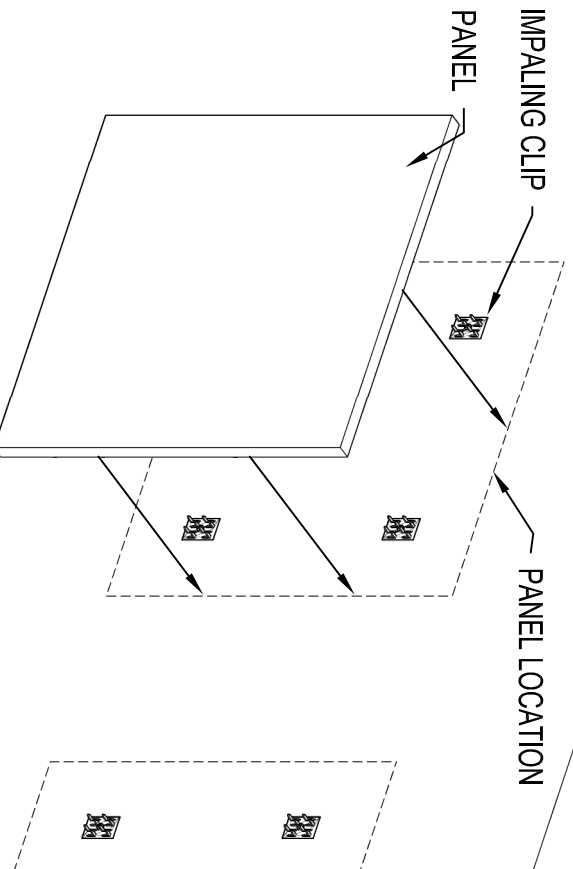

IMPALING CLIP MOUNTING DETAIL

REV	DRAWN BY	DATE

SCALE: NTS

JOB NUMBER: SHEET: 01

DRAWN BY: JP DATE: 09-10-14